


## POWER FOR YOUR PRINTER


### “BLACK” PRINTER MODEL (1985-1986)

To recharge:

1. Turn your computer and printer switches to the “OFF” position.
2. Plug in the AC/Adapter-recharger.
3. Charge your system for 12-15 hours.

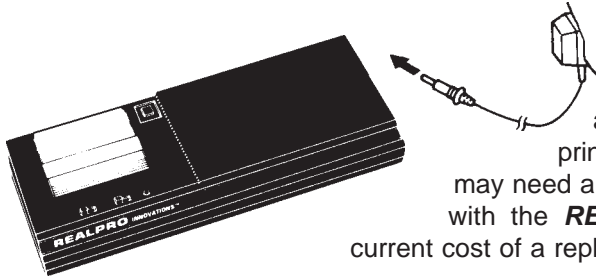

**NOTE: DO NOT** charge your printer until the low battery light comes on or until the printer is printing very slowly and the print is very light. Charging frequently will harm the batteries' ability to hold a charge for a long time. In the event that your printer no longer holds a charge, you may need a new Ni-cad battery pack. Check with the **REALPRO** Service Dept. for the current cost of a replacement Ni-cad battery pack.

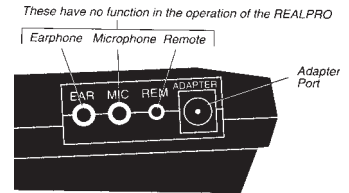

### “GRAY/BROWN” PRINTER MODEL

The gray/brown printer has “removable” batteries. This printer will operate on four regular AA Alkaline batteries. This printer does not have the rechargeable batteries.

**REALPRO does not recommend RECHARGEABLE NI-CAD BATTERIES.**

Adapter is optional

